


StorTrends® 3201j Overview

How to Connect StorTrends 3201j JBODs to the StorTrends 3200i Head:

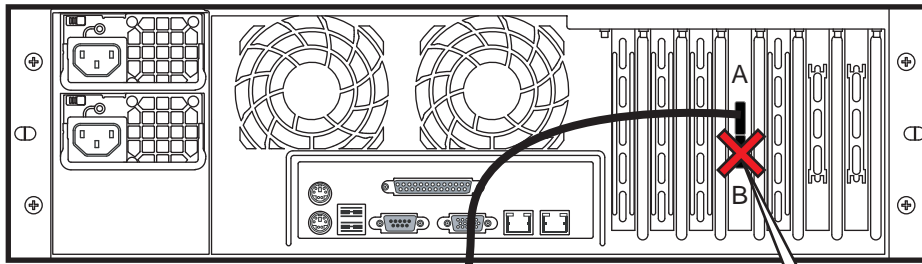


StorTrends 3200i Head


The bottom mini SAS connector (labeled "B") CANNOT be used externally because it is being used internally by the backplane.




StorTrends 3201j Enclosure1

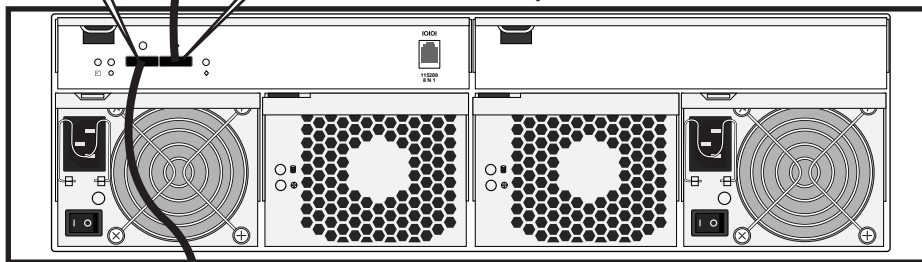

StorTrends 3201j Enclosure2

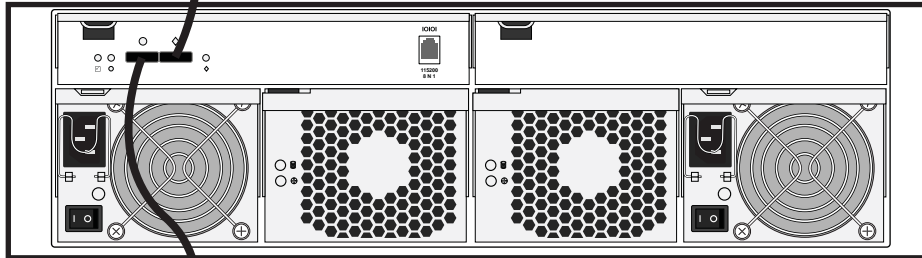

StorTrends 3201j Enclosure3

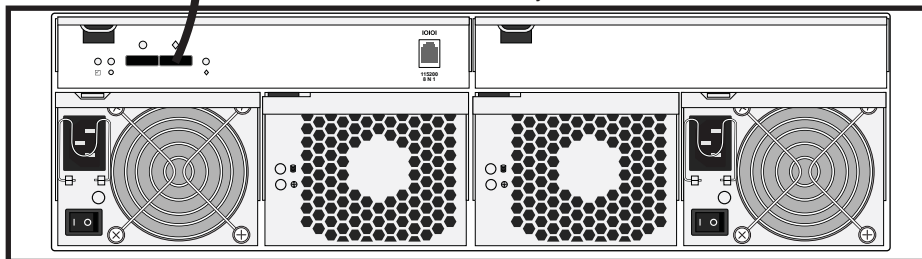

WARNING!

- SAS hot plugging is supported while SAS hot un-plugging is not. Because of this, the following rules apply:
- During initial setup, power on the JBOD enclosure(s) prior to connecting it to the head enclosure. Also note, both power supplies must be connected and powered on during initial setup and configuration.
 - Anytime after initial setup, when bringing down the entire storage setup to a powered off state, power down the head enclosure first. Then, power down the JBOD enclosures.
 - Anytime after initial setup, when bringing the entire storage configuration back online from a powered off state, power up the JBOD enclosures first and make sure that the cables are properly connected prior to powering up the head enclosure.

StorTrends[®] 3201j Overview

Hard Disk Bay Numbering Scheme

