


StorTrends[®] 3400 Overview


Please refer to the StorTrends[®] 3400 User's Guide for detailed information.

FRONT and DRIVE Order

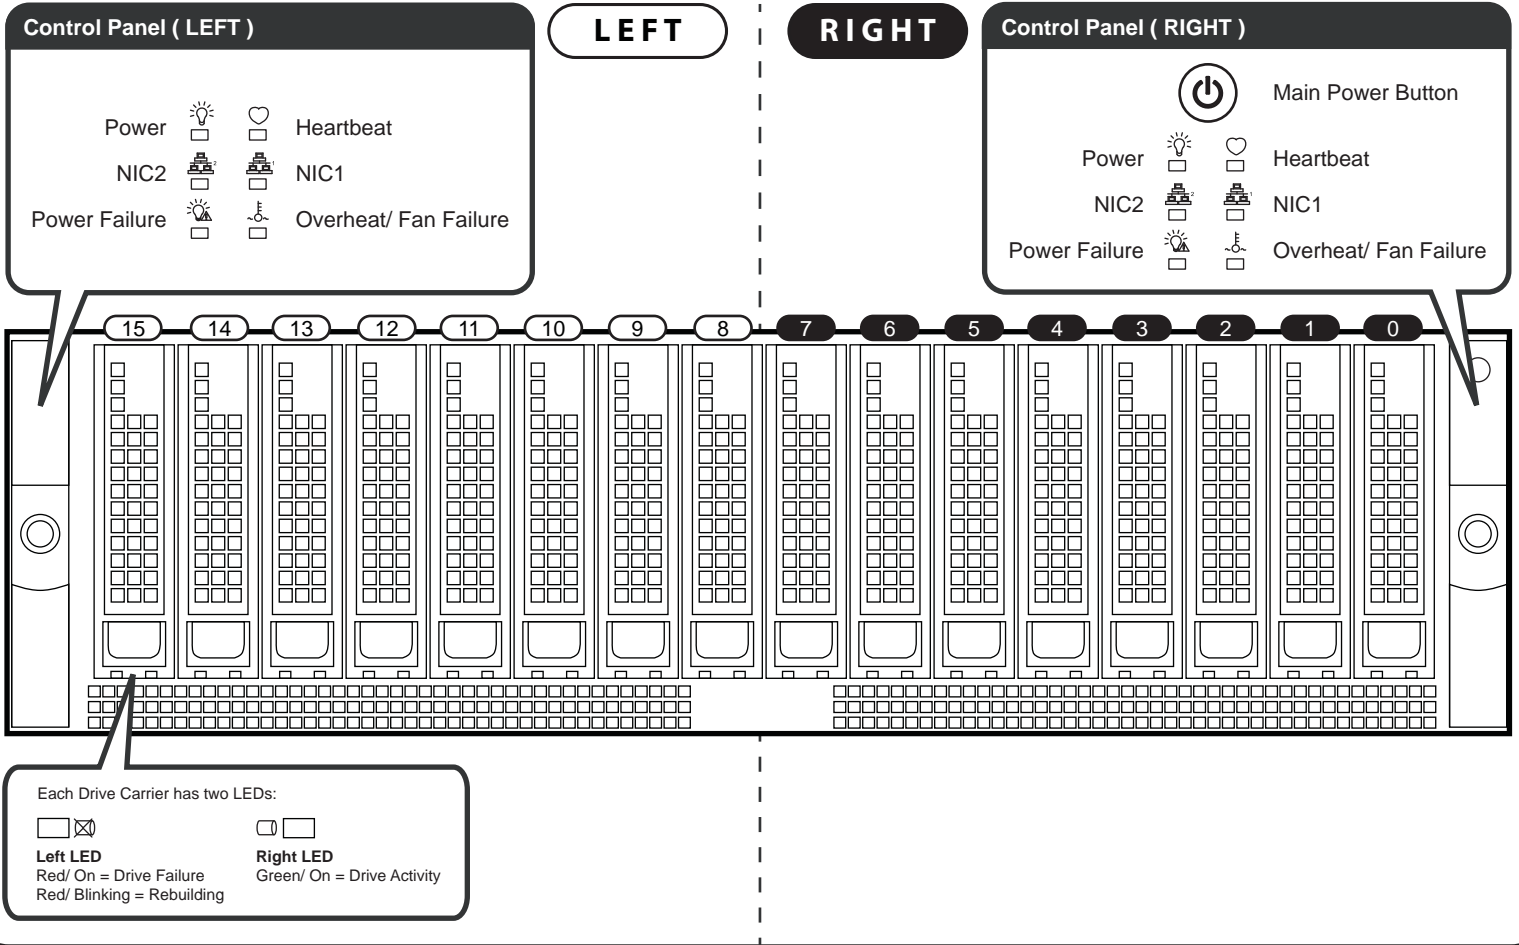

BACK

Note:
CPU Fan (each for RIGHT and LEFT) is located inside of the controller and is not shown.

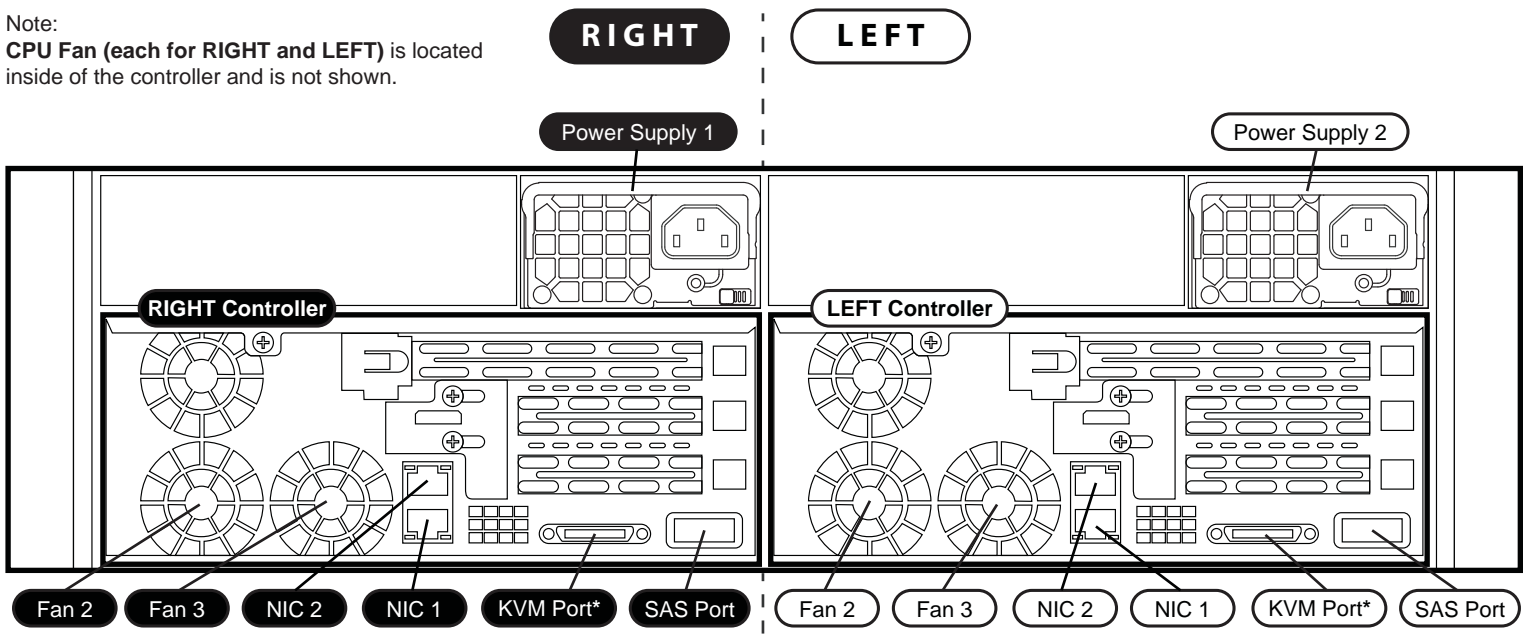

* KVM Port provides connectivity to Video, USB and Serial connectors.